



**LAYFIELD**



**CLEARFLOW**

Group Inc.

## BAZOOKA INSTALLATION INSTRUCTIONS



1: CLEARFLOW BAZOOKA



2: BAZOOKA LOAD



3: USE TWO  $\frac{3}{4}$ " WRENCHES TO REMOVE BOLTS OFF FLANGE




4: PULL OFF END FLANGE AND EXPOSE CABLE




5: EXPOSE ENTIRE CABLE LENGTH



6: TIE WATER BLOCKS TO CABLE ATTACHMENT POINTS

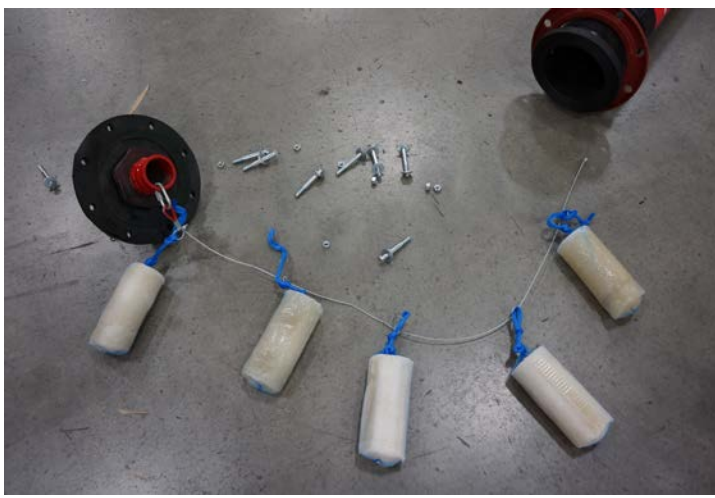

7: TIE ALL 5 BLOCKS TO ATTACHMENT POINTS \*

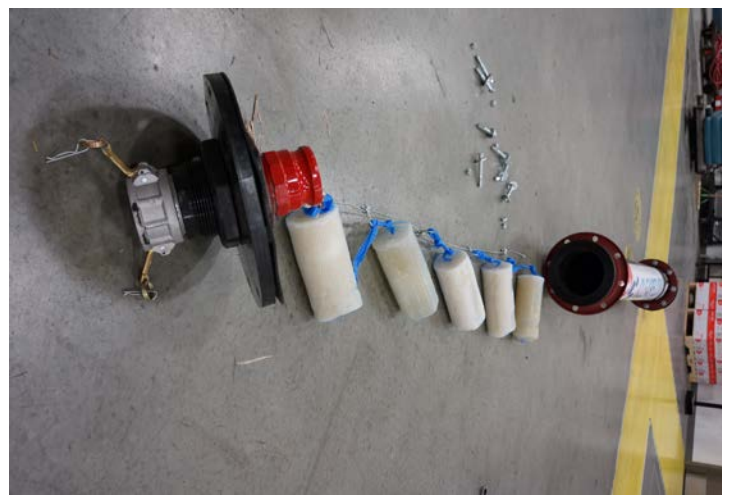

8: LINE UP CABLE/BLOCKS TO INSERT IN TO BAZOOKA



9a: INSERT CABLE W/ BLOCKS ATTACHED IN TO BAZOOKA



9b: INSERT CABLE W/ BLOCKS ATTACHED IN TO BAZOOKA



10: REATTACH END FLANGE TO BAZOOKA BODY



11: ATTACH HOSES AND PUMP

\*NOTE: BAZOOKA LOADS TO BE ATTACHED AS FOLLOWS.  
 394: 4 X 394 AND 1 X 398. 398 TO BE ATTACHED LAST IN FLOW DIRECTION  
 494: 4 X 494 AND 1 X 360. 360 TO BE ATTACHED LAST IN FLOW DIRECTION